

# DWLR-compact

## Digital Water Level Recorder incl. Temperature measurement



### Application areas/ device characteristics

- Automatic measurement of water level and temperature
- Applicable from 1"- ground water monitoring wells on
- Long battery life
- Compact design

### Water level probe/ temperature sensor

Water level probe:

Relative pressure: 0-1 mWC; 0 – 10 mWC; 0 – 25 mWC; 0-60 mWC

Other measuring ranges: On request

Linearity: 0,1 % FS

Temperature sensor:

Measuring range: -10°C...+50°C

Resolution: 0,1°C

### Data logger

Memory: 4 MB

Number of data sets: 256.000

Power supply: 1 pc. of Lithium battery, approximately 10 years' of operating at 1 measurement per hour

Assumed reading interval: every 4 weeks

Interface: RS 485

Configuration: Through operating software

### Mechanical dimension/ material/ environmental conditions

Dimension: Diameter: probe incl. data logger: 22 mm  
Length: approx. 240 mm

Material: Stainless steel 1.4301, sealing NBR, EPDM

Probe cable: Material PUR, diameter 6 mm  
Probe cable incl. air compensation capillary

Read-out connector: Installable at 2"-wells incl. suspension arrangement

Protection degree: Read-out connector: IP 65

### Optional accessories/ extension modules

Interface converter: RS 485 to USB

Adaptor washer Washer for installation of DWLR-compact at wells from 3" on

Modifications contributing to technical progress are subject to change without notice!




Umwelt- und Ingenieurtechnik GmbH Dresden  
Postfach 80 01 40, 01101 Dresden, Deutschland  
Zum Windkanal 21, 01109 Dresden, Deutschland

Telefon: +49 351 88646-82  
Fax: +49 351 8865774  
E-Mail: [vertrieb@uit-gmbh.de](mailto:vertrieb@uit-gmbh.de)  
Internet: [www.uit-gmbh.de](http://www.uit-gmbh.de)

# DWLR-compact


## Digital Water Level Recorder incl. Temperature measurement

### Example of use

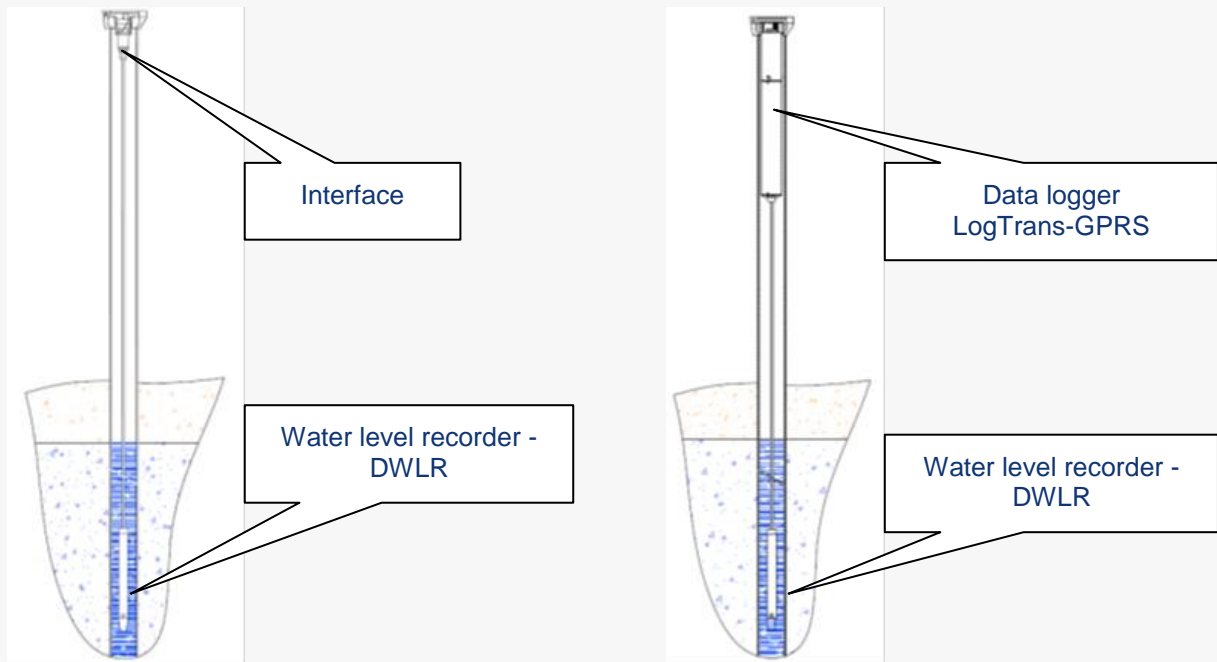

**Variant 1:**  
Stand-alone data logger operation

**Variant 2:**  
Data logger operation incl. GPRS telemetry

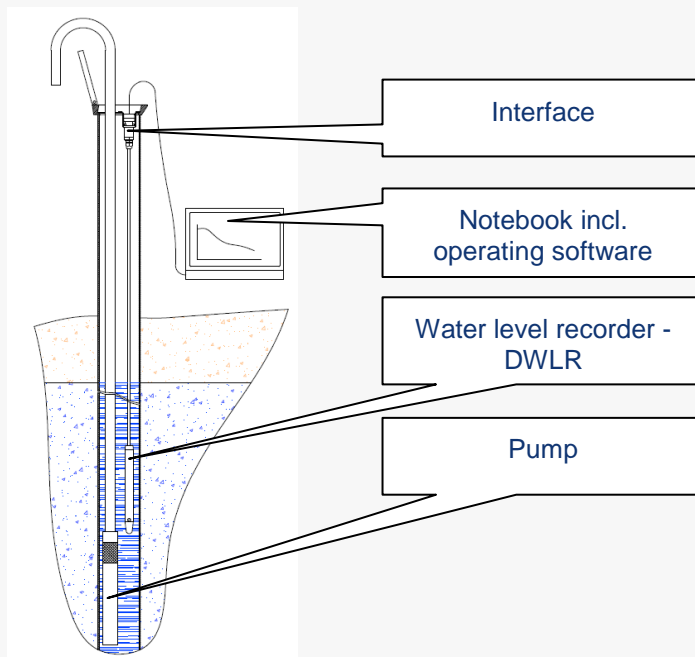

**Variant 3:**  
On-line display and recording of measurement values while pumping tests